

Important Safety, Use and Care Information

Thank you for choosing Circulon® Bakeware. These instructions are for your general safety, use and care to avoid personal injury and damage to your bakeware.

BAKING

- Keep small children away from the oven while you are baking. Some pets, especially birds, have extremely sensitive respiratory systems and should be kept away from the kitchen area.
- Use caution when handling hot bakeware and always have potholders available for use.
- Never place your bakeware over a direct flame. Do not use bakeware on stovetop, oven use only.
- Bakeware is oven safe to 260°C/500°F.
- Never use your bakeware in the microwave.
- Do not use metal or sharp-edged utensils, which will scratch the nonstick surfaces.
- Do not use nonstick sprays.

CLEANING

- Before first use and after each use, wash pans thoroughly with mild dishwashing detergent and warm water. Do not use oven cleaners to clean bakeware.
- Avoid soaking pans overnight. Dry promptly and thoroughly after washing.
- Although bakeware is dishwasher safe, hand washing is recommended.
- Do not use dishwasher detergent tablets; these concentrated cleansers will damage the finish.

Circulon® Lifetime Customer Satisfaction Guarantee

Meyer Cookware Australia Pty Ltd., has gone to painstaking lengths to engineer our most durable nonstick bakeware ever. Built on the cornerstones of quality and integrity, we know you'll be thrilled with its outstanding performance.

It is highly recommended that you follow these Use and Care instructions for continued outstanding performance and to preserve your warranty rights.

If you have any questions about your cookware, please address your enquiry to the Customer Service Department.

Meyer Cookware Australia Pty Ltd.

1 - 19 Merrindale Drive, Croydon South Victoria 3136

Call (03) 9761 5655 Fax (03) 9761 5658

OR visit us @ www.circulon.com.au