

Important Safety, Use and Care Information

Thank you for choosing this RACO® Roaster. These instructions are for your general safety, use and care to avoid personal injury and damage to your roaster.

BAKING

- Please remove the colour sleeve before use.
- Use caution when handling hot roaster and always have potholders available for use.
- Never place your roaster over a direct flame. Do not use roaster on stovetop.
- Never use your roaster in the microwave.
- Do not use metal or sharp-edged utensils, which will scratch the non-stick surface.
- Do not use non-stick sprays.
- Oven safe to 230°C

CLEANING

- Before first use and after each use, wash pan thoroughly with mild dishwashing detergent and warm water.
- Do not use scourers or oven cleaners to clean roaster.
- Avoid soaking roaster for extended periods of time. Dry promptly and thoroughly after washing.
- Do not put your roaster in the dishwasher.

Lifetime Guarantee

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure,

Meyer Cookware Australia Pty Ltd ("Meyer") provides the following guarantee in relation to RACO® Bakeware ("the Product").

The benefits of this guarantee are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this guarantee is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

Guarantee

Meyer guarantees that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the lifetime of the Product. The guarantee period commences on the date of sale by the original retailer to the original purchaser. The lifetime guarantee applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this Lifetime Guarantee.

If a defect appears in the Product before the end of the guarantee period and Meyer finds the Product to be defective in materials or workmanship, Meyer will, in its sole discretion either:

- (a) repair the Product using identical components; or
- (b) replace the Product with a product comparable in quality and value

Meyer reserves the right to replace defective parts of the Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Products presented for repair may be replaced by refurbished products of the same type rather than being repaired. Refurbished parts may be used to repair the products.

Meyer reserves the right to change or discontinue its product ranges at any time without notice and without liability.

Guarantee claims

Any claims for guarantee should be made with proof of purchase and full details of the alleged defect, to Meyer Cookware Australia Pty Ltd.

Meyer Cookware Australia Pty Ltd

Service Department
Reply Paid 85097
Croydon South VIC 3136

Alternatively, you can return the Product to the retailer from whom the Product was purchased, with proof of purchase and full details of the alleged defect.

To ensure the validity of your guarantee please retain proof of purchase and register the purchase with Meyer on-line or alternatively via mail.

The customer must make the Product available to Meyer or its authorised repair agent for inspection and testing.

Limitations

Meyer makes no express warranties or representations other than set out in this Guarantee.

The repair or replacement of the Product, or the refund of the purchase price of the Product, is the absolute limit of Meyer's liability under this Express Guarantee.