

# RACO Aerolift Bakeware

## Important safety use and care information

---

### **Baking**

- Please remove the colour sleeve before use.
- Use caution when handling hot bakeware and always have potholders available for use.
- Never place your bakeware over a direct flame. Do not use bakeware on stovetop.
- Never use your bakeware in the microwave.
- Do not use metal or sharp-edged utensils, which will scratch the non-stick surface.
- Do not use non-stick sprays.
- Oven safe to 240°C

### **Cleaning**

- Before first use and after each use, wash pans thoroughly with mild dishwashing detergent and warm water.
- Do not use scourers or oven cleaners to clean bakeware.
- Avoid soaking bakeware for extended periods of time. Dry promptly and thoroughly after washing.
- Your bakeware is dishwasher safe, however hand washing is recommended. In time the cumulative effects of strong agitation and harsh detergent will affect the appearance of your bakeware, possibly causing dulling and discolouration, although the performance will not be affected. Always follow dishwasher manufacturer's instructions carefully.